

Directions for Classroom Projection Systems with a Touch Panel Control Screen

Located in:

- Chase 101
- Gest 102
- Gest 103
- Hall 106
- Hall 112
- Sharpless S217
- Sharpless S410
- Stokes 010
- Stokes 014
- Stokes 016
- Stokes 018
- Stokes 102
- Stokes 119

Directions

- 1) Wake up the system by touching the touch panel (TP) screen
- 2) Touch it again to enter the main menu (See Figure 1.)
- 3) On the main menu select "Video Sources"
- 4) On the "Video Sources" screen (See Figure 2) select the device you wish to view on the projector. Selecting one of these sources will turn on the projector and lower the projection screen. The source choices in all rooms include:
 - Laptop: For a laptop connected to the computer video cable or input on the AV cabinet.
 - DVD: For the DVD player side of the DVD/VCR.
 - VCR: For the VHS tape side of the DVD/VCR.
 - Aux Vid: For the aux. video input the aux. input plate under the chalkboard.

The following buttons availability will vary by room:

- PC: For rooms with a built-in computer (Stokes 10 and 16 only)
 - Wall PC: A computer attached to the aux. input plate under the chalkboard. Use the cable in the drawer.
 - Wireless*: To connect to the projector via wireless.
- 5) Connect your laptop♦: Use the computer video cable in the cable cubby on top of cabinet counter or in the drawer of the cabinet.
 - 6) Adjust the volume with the controls on the right side of the screen.
 - 7) Internet and Network Access: Connect the Ethernet cable to laptop.
 - 8) **Turn off the system before you leave!**: To turn off the system push the green "Power" button and follow the on-screen directions.

Other Controls: Refer to Figure 3

- A. ENVIRON: On this page you will find controls to raise and lower the projection screen. The projection screen function is totally automatic, so you'll probably never use this.
- B. POWER: Press this before you leave to shut down the system. Follow the on-screen directions.
- C. HELP: Press the "help" button on the control panel and follow the on-screen directions to alert the AV office. We recommend that you also call the office and describe your problem, as we may be able to fix it remotely: FOR HELP CALL 610-896-1193
- D. AV MUTE: This button mutes both the AUDIO and the VIDEO signals.
- E. MUTE: This button mutes the AUDIO only.

Figure 1: MAIN MENU



Figure 2: VIDEO SOURCES


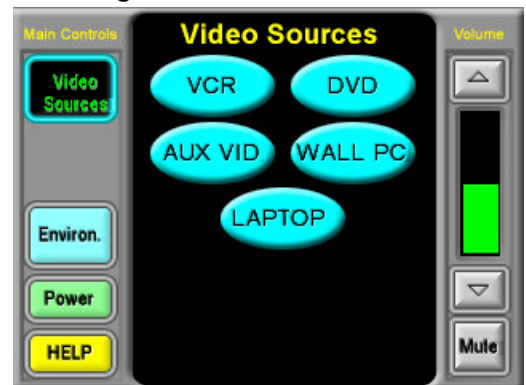


Figure 3: OTHER CONTROLS

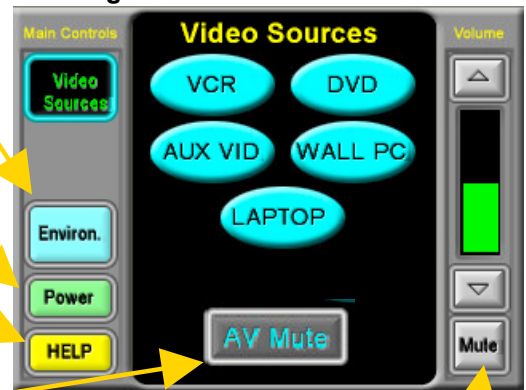

* Wireless projection: Requires a software download and settings change. Contact AV Services.

♦ Laptop Video Settings: You may have to adjust your laptop's video settings to get the image onto the projector.

On a DELL use the FUNCTION-F8 combination (On others, look for TV icons, "LCD" or "display" on the function keys).

On a MAC laptop you may have to "arrange the monitors" and/or Select "mirroring" in the control panel/display settings.

Also try: Enter sleep mode by closing the laptop. Awaken and laptop should send video signal to projector automatically.

FOR HELP CALL 610-896-1193